



PROGRAMMING RI TRANSMITTERS



MASTER PROGRAMMING

1. The first transmitter memorized is considered the master and other transmitters must be programmed using the master.
2. Only provide power to the motor being programmed.
3. Press and hold button (A) momentarily on the transmitter until the motor moves then release the button.
4. Watch the direction the motor moved.
5. Within 5 seconds press the corresponding direction on the master transmitter.
6. Verify with the transmitter that the motor directions are programmed correctly.

Note: if a master must be replaced the motor must be reset before a new master can be programmed

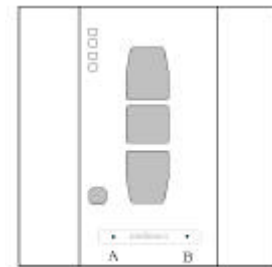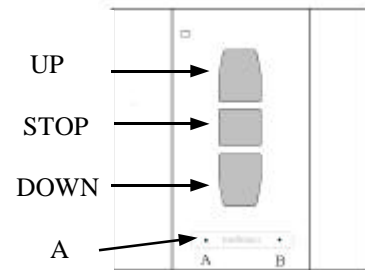

PROGRAMMING ADDITIONAL TRANSMITTERS

1. Confirm that the only motor being programmed is powered.
2. Press button (A) on the master transmitter until the motor moves then release the button.
3. Note the direction of the motor.
4. Press the corresponding direction on the new transmitter.
5. Confirm the directions with the new transmitter.

Clearing All Codes (W/Master)

1. Connect power to motor
2. press (A) button and (STOP) on the master transmitter at the same time.
3. release the buttons when motor jogs

Clearing all codes (without master)

1. Disconnect power to motor
2. Press the (A) button and (STOP) on any transmitter and turn on the power at the same time.
3. Hold until the motor jogs and release.